


# EDWARD MARTIN

Maurice Sconce  
EM\_150.569.0015

## PARTS ENCLOSED:

ITEM	DESCRIPTION	QTY.
(A)	Sconce Base	1
(B)	Shade	1
(C)	Shade Ring	1
(D)	Back Plate Strip	2
(E)	Mounting Screw	4
(F)	Screw for Sconce	4
(G)	Bulb (Not Included)	1

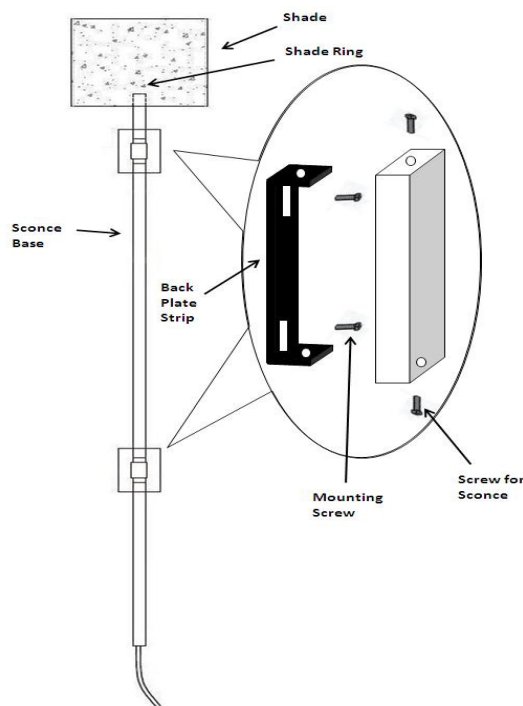

## IMPORTANT SAFETY INSTRUCTIONS:

1. This portable Sconce has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety features.
2. It is recommended to use 1x40-Watt maximum Type B standard bulb.
3. To avoid the risk of fire do not exceed the recommended wattage.
4. The manufacturer and distributor accept no liability for incorrect installation.
5. For indoor use only.
6. Keep away from children.

## WARNINGS:

Please read all instructions completely before installation.

## TO ASSEMBLE:

1. Carefully unpack the Sconce. Do not discard any material till assembly is complete.
  2. Unscrew the black plate strips from the sconce base.
  3. Align and screw the back plate strips on the desired wall location.
  4. Now the place the sconce base on the black plate strips and tighten the screws.
  4. Place the Shade on to the Sconce and and tighten with shade ring.
  5. Insert bulbs (not included) into the socket.
- Insert the polarized plug in the outlet & turn on the power, to test the Sconce

## CARE INSTRUCTIONS:

To clean, use a soft dry cloth only. Donot use any chemical or abrasive cleaners.