


EDWARD MARTIN

INSTALLATION INSTRUCTIONS

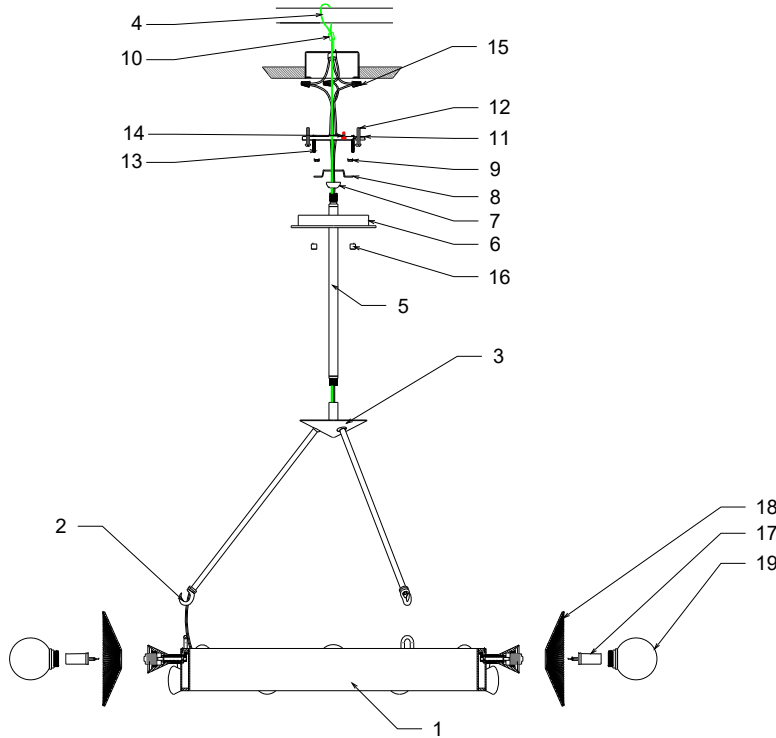

ITEM	DESCRIPTION	PART NUMBER
1	FIXTURE ASSEMBLY	FAS-333-32
2	HOOK	HOK-333-32
3	DISTRIBUTOR	MIS-333-32
4	SAFETY CABLE	CBL-333-32-S
5	5/8" DIA STEM KIT 6"+12"+12"+18"	STM-TC1600-SET
6	CANOPY	CPY-333-32
7	SWIVEL	SWL-333-32
8	SWIVEL BLOCK	SWL-333-32-B
9	HEX NUT	HDW-333-32
10	CABLE CLIP	HDW-333-32
11	MOUNTING PLATE	HDW-333-32
12	MOUNTING SCREW	HDW-333-32
13	STUD	HDW-333-32
14	GROUND SCREW	HDW-333-32
15	WIRE NUT	HDW-333-32
16	MOUNTING NUT	HDW-333-32
17	LED G9 BULB	BLB-4W-G9-50
18	METAL SHADE	SHD-333-01
19	GLASS DIFFUSER	GLS-333-01

⚠ WARNING/CAUTION

- **DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE. READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.**
- **TO AVOID THE RISK OF FIRE OR SHOCK, FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRICAL/BUILDING CODES. THE INSTALLATION AND MAINTENANCE OF THIS UNIT SHOULD BE COMPLETED BY A LICENSED ELECTRICIAN OR CERTIFIED FACTORY TRAINED TECHNICIAN.**
- **CALIFORNIA PROP 65: THIS LIGHTING FIXTURE CONTAINS CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS, AND/OR OTHER REPRODUCTIVE HARM. WASH HANDS AFTER USE.**
- **REMOVE THE FIXTURE, PARTS AND PARTS BAG(S) FROM THE CARTON. BEFORE DISCARDING THE CARTON, DOUBLE CHECK TO MAKE CERTAIN THAT ALL PARTS ARE FOUND. INSPECT THE FIXTURE PRIOR TO INSTALLATION FOR ANY DAMAGE TO THE FIXTURE.**
- **DIMMING: THE FIXTURE CAN BE CONTROLLED BY A WALL DIMMING DEVICE. ONLY USE TRIAC/ELECTRONIC DIMMER. MAKE SURE THE CARTON IS MARKED FOR USE WITH LED COMPACT FLUORESCENT-INCANDESCENT LIGHT SOURCE ONLY. THESE CAN BE PROVIDED BY YOUR LOCAL ELECTRICAL DISTRIBUTOR, HOME CENTER, OR HARDWARE STORE.**
- **PLEASE CLEAN WITH A SOFT, DRY CLOTH ONLY! DO NOT USE CLEANSERS**

FIXTURE INSTALLATION

1. Hang the FIXTURE ASSEMBLY (1) to the HOOKS (2) at the ends of the stems on the DISTRIBUTOR (3).
2. Feed the wires & SAFETY CABLE (4) through the STEM (5) and twist tightly onto the DISTRIBUTOR (3). Keep adding additional stems until you desired hanging height is met.
3. Slide in CANOPY(6) onto the STEM (5), and thread the SWIVEL (7) onto the top end of the STEM (5). Then attach the SWIVEL BLOCK (8) above the CANOPY (6) using HEX NUTS (9).
4. Attach the SAFETY CABLE (4) to the building structure or brace using CABLE CLIP (10).
5. Pull the wire out from the junction box, and install the MOUNTING PLATE (11) onto the junction box using the MOUNTING SCREWS (12). This fixture is designed to be mounted on standard round or octagon junction box. The junction box must be securely mounted to the structure of the building. Thread the STUDS (13) unto the MOUNTING PLATE (9). Adjust the STUDS (13) so that the threads extend $\frac{3}{16}$ " below the CANOPY (6) and secure with HEX NUTS (7).
6. Trim off the excess wire to a minimum 6" beyond the STEM and strip each wire $\frac{5}{8}$ ".
7. Attach the Ground wire (Green) to the ground inside the outlet box (Generally green or bar copper wire) or the GROUND SCREW (14) on the MOUNTING PLATE (11). **NEVER CONNECT GROUND WIRE TO "HOT" WIRE! FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!**
8. Connect the white fixture lead to the neutral (Generally white) wire in the outlet box. Fasten the wires together with an approved fastener (WIRE NUT) (15). Starting 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener. **MAKE SURE THERE ARE NO EXPOSED WIRE OF STRANDS THAT COULD CAUSE A DANGEROUS SHORT CIRCUIT!**
9. Connect the black fixture leads to the hot (Generally black) wire in the outlet box. Fasten the joined wires same as previous step. **NEVER REVERSE HOT AND NEUTRAL WIRES. FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!**
10. Push the wires back into the junction box. Lift up the CANOPY (6) up to the ceiling, and secure with the MOUNTING NUTS (16)
11. Push the BULB (17) up into the sockets of the fixture. **THIS FIXTURE IS RATED FOR 5 WATTS LED TYPE G9 LAMP. DO NOT EXCEED THE RECOMMENDED WATTAGE!**
12. Place the METAL SHADE (18) onto the socket before threading the GLASS DIFFUSER (19) onto place.
13. Restore power to the outlet at the breaker or fuse box.